## HOW TO TAKE (SHUCK) THE HARD DRIVE OUT OF A (8TB) WD EASYSTORE ENCLOSURE

## By Hanime

WARNING: Do this at your own risk to your product and warranty! I am not liable and take no responsibility for your actions within.



Photo reference. There are 4 clips on the DC IN/USB side (refer to as the back side). The top and bottom side of the case have a railing on each side that the body holding the hard drive will eventually slide out of the case.



Photo reference. The photo above demonstrates how the card will be inserted—what it looks like from the inside.




Use a discarded credit card (cut into pieces) or similar. Insert your flat plastic pieces onto the groove of each clip. Make sure you push as much as possible on each so it reaches the clip's base. Notice the clips are located staggered.



Pry the rounded part of the top to detach the body from the case. Repeat on the bottom side, then top side a couple of times until you get a gap.



A gap is created on top and bottom side.

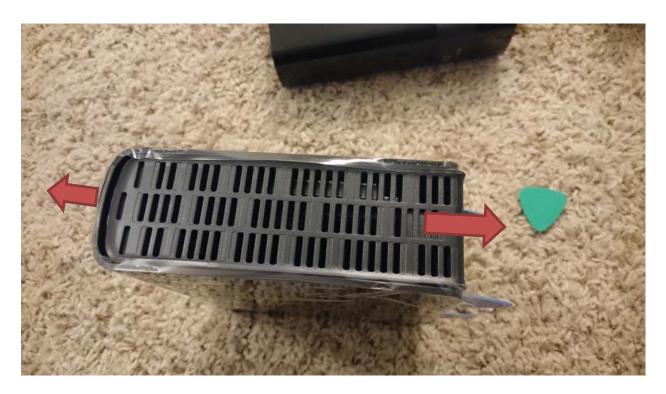

With your hands/fingers, pull the body away from the case. Repeat bottom and top side a couple of times until you get a bigger gap.



A nice gap now.



With the gap revealed on the back side, use your fingers to pull the body from the case.



Beautiful! Time to put that sucker in a NAS. :]